

HYDROLASER MINI - MICRO LED

COD 108001

COD 108002

ASSEMBLY AND OPERATING INSTRUCTIONS:




-very low voltage feeding with security transformer
-Class III no earth required

-alimentazione solo con trasformatore di sicurezza a bassissima tensione non necessita di messa a terra di protezione

-für den Betrieb an Schutzkleinspannung ausgelegt
-Schutzleiteranschluss nicht zulässig

-alimentation à très basse tension par transformateur
Classe III de sécurité pas de mise à la terre



-replace the damaged protective glass
-sostituire i vetri di protezione se danneggiati
-die Beschädigten Schutzgläser ersetzen
-remplacer les verres de protection abimés
-glass features: plane float glass - safety tempered
-caratteristiche vetro: vetro piano float di sicurezza temperato
-Glaseigenschaften: Float-Flachglas, gehärtetes Sicherheitsglas
-caractéristiques du verre: type de verre: plan" float" de sûreté trempé



-getting rid of as urban waste forbidden
-separate collection is mandatory when the product is at the end of its life

-è vietato lo smaltimento come rifiuto urbano
-è obbligatoria la raccolta separata a fine vita del prodotto

-Das Entsorgen im Hausmüll ist verboten!
-Bei Ablauf der Lebensdauer bitte beachten:
-Abfalltrennung ist Pflicht

-il est interdit l'élimination comme ordure urbaine
-le ramassage séparé est obligatoire lorsque le produit est à la fin de sa vie

IP66




Made in Italy

NB: These assembly instructions must be given to end users for correct maintenance and so that they know how to change the bulb. The appliance must not be tampered with or transformed and it must be installed and used as supplied and in compliance with the National Rules on Installations. Any non-compliant installations will invalidate all forms of guarantee. The company cannot be held responsible for damage caused by incorrect assembly.

NOTA BENE: Le presenti istruzioni di montaggio devono obbligatoriamente essere consegnate all'utente finale affinché conosca le corrette modalità di manutenzione e ricambio lampada. È vietata qualsiasi manomissione e/o trasformazione dell'apparecchio che deve essere installato e utilizzato: così come fornito e in conformità alle Norme Impianti Nazionali. Installazioni non conformi fanno decadere ogni forma di garanzia, l'Azienda non risponde dei danni causati da un errato montaggio.


COD. 108001

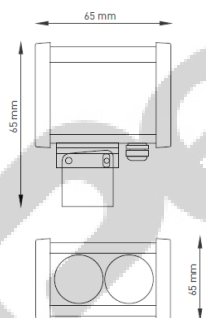

HYDROLASER MICRO LED

-Power consumption : 6W
-Voltage :24 Vdc
-Color Temperature : 3000K
-Beam angle : 5°
-Lumen output 400Lm
-Insulation class: III
-IP protection: IP66
-Gross weight: 0.80kg

COD. 108002

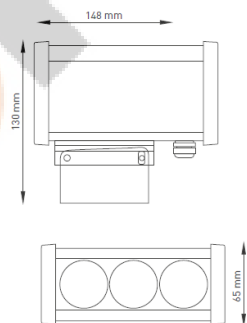

HYDROLASER MINI LED

-Power consumption : 10W
-Voltage :24 Vdc
-Color Temperature : 3000K
-Beam angle : 5°
-Lumen output 600Lm
-Insulation class: III
-IP protection: IP66
-Gross weight: 1.1kg

Installation:

CAUTION: Possibly hazardous optical radiation emitted from this product. Do not stare at operating lamp. May be harmful to the eye. The replacement must be done by a qualified electrician.

Recommendations

- 1) verify that the equipment used to connect our devices to enjoy all the guarantees required under European law;
- 2) use the cables, connectors and quality materials for electrical wiring;
- 3) Products with IP65/68 degree make the wiring / connections with accessories provide the same degree IP of the selected product (available in the catalog);
- 4) Disconnect main voltage during installation and maintenance
- 5) It is essential to do a frequent cleaning of the glass and of the outer surface of the fixture to avoid build up of mud and dirtiness resulting in dangerous overheating due to uncorrect light and heat dissipation. Clean carefully the glass screen removing limestone deposits by means of a scraper.

HYDROLASER MICRO & MINI INSTALLATION

1 drill holes in the floor using dowels (fischer type) not included in the package. The position of the luminaire must be close to the wall of the building


2 tighten 4 screws using the tool included in the package.

3 making the electrical connection (24Vdc) pay attention to the correct polarity brown cable + and blue cable -

4 turn on the luminaire and then making the correct inclination adjustment by unscrewing two rear screws (like picture)

5 when the inclination is correct tighten the screws

1

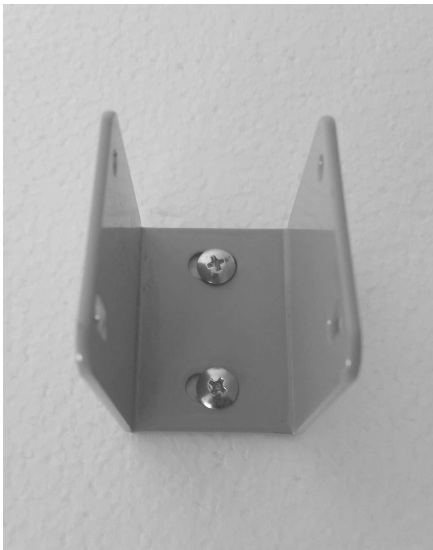

2



3

